Operations with SIP Devices

This page contains instructions on how you can manage SIP devices from the interface.

- Overview
- Export to CSV
- **Clear assignments**
- Regenerate files
- Search for a device
- Remove a device

Overview

When logged in the VoipNow interface, click on SIP Devices under Telephony Provisioning and you'll be redirected to the SIP Devices page.

The SIP Devices Inventory lists the provisioned SIP devices taking into consideration the level of the authenticated VoipNow user.

SIP Devices		🍇 Ret	turn to My Account	Open menu 🗸	? Help 🔗 L	Jp level	
Tools						^	
Add New Device							
SIP Devices Inventory							
All	devices 🔹 🔍 Search 🖳 S	how All					
	III	Show Columns 🧏 Cl	ear Assignments 🛛 🖁 F	Regenerate Files 🛛 🖓 Expo	ort to CSV 🗙 Remove S	elected	
S Friendly Name	Serial	MAC	Owner	Assigned Organization	Assigned Users		
✓ Polycom	f3b591150639	00:15:65:90:78:00	Mark Towns	AT MAIN ORG 152 AT MAIN ORG 152	Mark Towns (0152*007	7)	
Cisco	5a2876466188	00:15:65:22:22:66	Jane Frost	AT MAIN ORG 152 AT MAIN ORG 152	Jane Frost (0152*005)		
Snom	4a9259058769	00:18:89:66:99:56	Tom Apple	AT MAIN ORG 152 AT MAIN ORG 152	-		
Panasonic	2dd443256208	00:A8:59:90:34:34	Adam Fields	AT MAIN ORG 152 AT MAIN ORG 152	-		
✓ Aastra	70d282934128	00:15:65:23:34:54	Sam Barnes	AT MAIN ORG 152 AT MAIN ORG 152	Sam Barnes (0152*098	3)	
Authenticated Authenticated Service Provider A System Admin		Authenticated Or	Authenticated Organization		Authenticated User		
Can see all xisting SIP levices. • Can see all the SIP devices that • he or the admin owns.		 Can see all the the Organization 	 Can see all the SIP devices owned by the Organization, its Service Provider 		 Can see all the SIP devices that he owns as well a those owned by his Organization, Service Provide 		

the Organization, its Service Provider and admin. • Can see all the devices assigned to

Can see all the devices owned by and

assigned to the Users in the

the Organization.

Organization.

- those owned by his Organization, Service Provider, and admin.
 - · Can see all the devices assigned to his extensions.

Here are the operations you can perform on such devices.

Organizations.

· Can see all the devices owned by

or assigned to the Users in his

or assigned to his Organizations.

Can see all the devices owned by

Enable or disable a SIP device

All SIP devices are listed in the SIP Devices Inventory. You can enable or disable a device with a simple click on the Si con showing the status of the

for enabled/the device is provisioned **Case** for disabled/the device is not provisioned. device:

When disabling a device, the corresponding provisioning file is deleted from the disk. When enabling a device, the file is regenerated.

Export to CSV

This control available at the top right of the table allows you to export the information available in the SIP Devices Inventory to a .csv file.

Clear assignments

To remove the extension(s) to which a device is assigned:

- 1. Select checkbox(es) corresponding to the device(s) you want to unassign.
- 2. Click the Clear assignments link. This will automatically unassign the device.

Regenerate files

To regenerate the provisioning files for a device:

- Select the checkbox(es) corresponding to the device(s) you want to reprovision.
 Click the <u>Regenerate files</u> link. This will automatically regenerate the files.

Search for a device

The same SIP Device Inventory list displays the Assigned Organization column, which refers to the organization the provisioned device is assigned to. The Assigned Users column lists all user assigned to the device. If no device is assigned to any account or no users are assigned to the device, the "-" is displayed. As an administrator, you can see all the devices provisioned in system.

The search control allows you to choose the devices to be displayed:

- All devices: The list will display all the provisioned devices, regardless of who the owner is.
- Owned by me: Only the devices provisioned by you will be displayed.

To filter the templates:

- 1. Enter the name of the template in the text box located above the table.
- 2. Click the Search button. The system remembers the search criteria when a new search is performed and even after the user logs out.

Remove a device

To remove a certain device:

- 1. Select the device from the inventory and click the Remove selected link on top of the table.
- 2. Select the Confirm removal checkbox and click OK. To return to the previous page without removing the device, click Cancel.

Related topics Provision a SIP device

Add a provisioning template