

Manage SIP Devices

About SIP Devices

Once you have configured your phone terminal extensions, you need to connect them to physical devices. For that, you may use a provisioning template.

To manage SIP devices and provisioning templates, go to **Unified Communications** in the side menu and click on the [SIP Devices](#) icon in the **Assets** area.

- [Provision a SIP Device](#)
- [Operations with SIP Devices](#)
- [Provisioning permission levels](#)